


## Wire Preparation for Cord Switch

### Instructions:

1. Open switch into two sections
2. Cut  $\frac{1}{2}$  inch out of one side of cable
3. Separate the two cables near the cut
4. Press halves together and reassemble switch

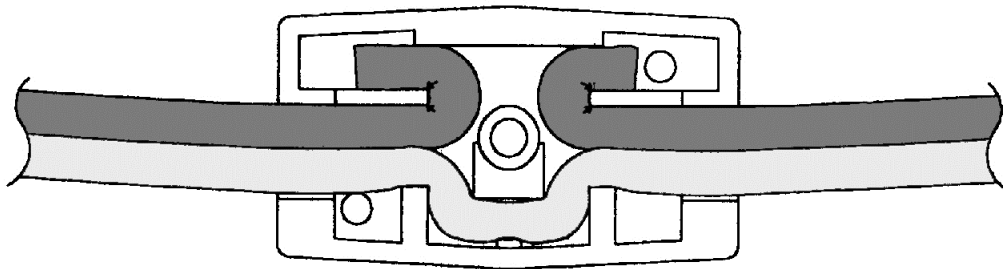

**Note:** Failure to orient wire as depicted will result in switch not being able to turn power on.